1. เมื่อดาวน์โหลด Driver สำหรับติดตั้งแล้วยังไม่ต้อง Install printer driver

## ดังรูปข้างล่าง ให้กด Cancel

Seagull Driver Wizard	
	Welcome to the Seagull Driver Wizard
	This wizard helps you install and remove printer drivers.
	What would you like to do?
	<ul> <li>Install printer drivers</li> <li>Upgrade printer drivers</li> </ul>
	Remove printer drivers
	< Back Next > Cancel

2. ให้เข้า Printer and Fax เลือก Printer GC420t(EPL) > Printer Properties>Advance>New Driver>

Have Disk> ให้เลือก Path C:\Seagull\Zebra

	Install Fro	m Disk		
Hadd Printer Driver Wiza Printer Driver Selectio The manufacturer and		Insert the manufacturer's installation disk, and then make sure that the correct drive is selected below.	OK Cancel	erties 🛛 🕅
Select the manu		C ()   N (		Advanced Color Management Security
		Copy manufacturer's files from:		
If Windows Upd		C:\Seagull	Browse	M To 12:00 AM T
Manufacturer Brother Canon Epson Fuji Xerox Constitution This driver is digitally Tell me why driver signal	/ signed. gning is im	Printers Brother DCP-116C Brother DCP-117C Brother DCP-128C Brother DCP-129C Undows Update	Have Disk	Bdpi ZPL    New Driver   gram finishes printing faster ge is spooled
		< Back Next >	Cancel	5
		🗌 Кеер	printed documents	
		V Enab	e advanced printing fea	atures
		Print	ing Defaults	Print Processor Separator Page

## 3. ให้เลือก Model **GX420t-EPL**

Add Printer Driver Wizard	×				
Printer Driver Selection The manufacturer and model determine which printer driver to use.					
Select the manufacturer and model of the printer driver to install. If the driver you want is not listed, click Have Disk to select the driver you want. If Windows Update is available, click it for more drivers for this processor and operating system.					
Manufacturer	Printers				
Datamax-O'Neil Zebra	Zebra GX420t - EPL Zebra GX420t - ZPL Zebra GX430t - EPL Zebra GX430t - ZPL				
This driver has an Authenticode(tm) signature.       Windows Update       Have Disk         Tell me why driver signing is important       Windows Update       Have Disk					
	< Back Next > Cancel				

4. เข้า Printer and Fax>เลือก Zebra GX420t-EPL>Printing Preferences>Stock>Print Method เป็น Direct Thermal

Zebra GX420t - EPL Printing Preferences  Page Setup Graphics Stock Options About					
Print Method: Direct Thermal					
Media Type:	Labels With	Gaps 👻	Reverse Sensor		
Gap Height:	0.12 in	Gap Offset:	0.00 in		
Mark Height:		Mark Offset:			
Extra Feed:		Include All	Whitespace		
Media Handling					
Post-Print Action: Tear Off					
Occurrence: After Every Page -					
Interval:		Feed Adju	istment:		
OK Cancel Apply Help					